




## User Manual

# Spring series LFP Battery

SE-G10.2

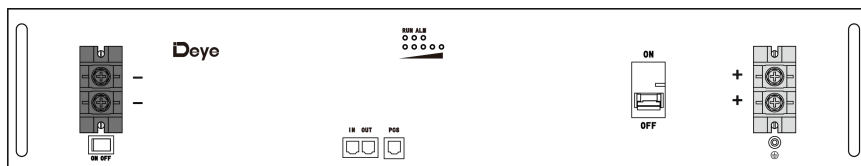













Version: V3.0

# Table of Contents

|  |    |
|--|----|
| Read and follow these instructions! .....                      | 2  |
| 1. Precautions .....   | 3  |
| 1.1 General Safety Precautions .....                           | 3  |
| 1.2 Installation Precautions .....                             | 3  |
| 2. Product Introduction .....                                  | 5  |
| 2.1 Front Panel Function Introduction .....                    | 5  |
| 2.2 Product Specifications .....                               | 6  |
| 2.3 State Indicator .....                                      | 7  |
| 3. Unpack the Battery .....                                    | 8  |
| 3.1 Parts List .....   | 8  |
| 3.2 Visual Inspection of the Modules .....                     | 10 |
| 4. Battery Installation .....                                  | 10 |
| 4.1 Battery Module Installation .....                          | 11 |
| 5. Cable Connection .....                                      | 15 |
| 5.1 Single Battery Connection .....                            | 15 |
| 5.2 Connect Cables of the Multiple Batteries in Parallel ..... | 18 |
| 5.3 Visual Inspection of the Connection .....                  | 21 |
| 6. Activate the Product .....                                  | 21 |
| 6.1 Start the Battery .....                                    | 21 |
| 7. Inspection, Cleaning and Maintenance .....                  | 22 |
| 7.1 General Information .....                                  | 22 |
| 7.2 Inspection .....   | 22 |
| 7.3 Cleaning .....   | 22 |
| 7.4 Maintenance .....  | 22 |
| 7.5 Storage .....  | 23 |
| 8. Troubleshooting .....                                       | 24 |
| 9. Battery recovery .....                                      | 26 |
| 9.1 Recovery process and steps of cathode materials .....      | 26 |
| 9.2 Recovery of anode materials .....                          | 26 |
| 9.3 Recovery of diaphragm .....                                | 26 |
| 9.4 List of recycling equipment: .....                         | 26 |
| 10. Transportation Requirements .....                          | 27 |

## Read and follow these instructions!

The following precautions are intended to ensure your safety and prevent property damage. Before installing this product, be sure to read all safety instructions in this document for proper installation.

|   |   |
|---|---|
|    | <div><b>DANGER</b></div> <div>Failure to comply with the instructions with this symbol may result in a serious accident, causing death or a severe injury.</div> |
|    | <div><b>WARNING</b></div> <div>Failure to comply with the instructions with this symbol may result in a serious accident, causing a severe injury.</div>         |
|    | <div><b>CAUTION</b></div> <div>Failure to comply with the instructions with this symbol may result in minor or moderate injury.</div>                            |
|    | <div><b>NOTICE</b></div> <div>Provides information considered important but not hazard-related. The information relates to property damage.</div>                |
|    | Read instruction before use   |
|    | Risk of electric shock  |
|   | Operate as specified by the manual  |
|  | CE mark of conformity   |

This product is designed to an integrated system, which must be performed by a qualified person trained in electrical engineering and familiar with the characteristics and safety requirements of lithium batteries. Do not use this product if you are unsure if you possess the necessary skills to complete this integration.

## **1. Precautions**

### **1.1 General Safety Precautions**

The product provides a safe source of electrical energy when operated as intended and as designed. Potentially hazardous circumstances such as excessive heat or electrolyte mist may occur under improper operating conditions, damage, misuse and/or abuse. The following safety precautions and the warning messages described in this part must be observed.

If any of the following precautions are not fully understood, or if you have any questions, contact us for guidance.

#### **Risks of explosion**

- Do not subject the battery to strong impacts.
- Do not crush or puncture the battery.
- Do not dispose of the battery in a fire.

#### **Risks of fire**

- Do not expose the battery to temperatures in excess of 60°C.
- Do not place the battery near a heat source such as a fireplace.
- Do not expose the battery to direct sunlight.
- Do not allow the battery connectors to touch conductive objects such as wires.

#### **Risks of electric shock**

- Do not disassemble the battery.
- Do not touch the battery with wet hands.
- Do not expose the battery to moisture or liquids.
- Keep the battery away from children and animals.


#### **Risks of damage to the battery**

- Do not allow the battery to encounter liquids.
- Do not subject the battery to high pressures.

### **1.2 Installation Precautions**

Please be aware that a battery presents a risk of electrical shock including high short-circuit current. Follow all safety precautions while operating the batteries.

- Remove watches, rings, and other metallic accessories.
- Use tools with insulated handles in order to avoid inadvertent short circuits.
- Wear rubber gloves and safety boots.
- Do not put tools or any metal parts on the top of the batteries.
- Disconnect charging source and load before connecting or disconnecting terminals.
- When moving batteries and wear all appropriate safety clothing and equipment.
- Do not open or mutilate the batteries.

|   |  |
|---|--|
|  | <div data-bbox="266 135 459 183" data-label="Section-Header"> <p><b>⚠ CAUTION</b></p> </div> <ul data-bbox="257 223 913 446" style="list-style-type: none"> <li>▪ Verify polarity at all connections before energizing the system. Reverse polarity at the battery terminals will void the Warranty and destroy the batteries. Do not short circuit the batteries.</li> <li>▪ Do not combine Lithium Batteries with other brands or chemistries; Do not mix Lithium Batteries from different installations, clients, or job sites.</li> <li>▪ Do not disassemble or modify the battery. If the battery housing is damaged, do not touch exposed contents.</li> </ul> |
|---|--|

## 2. Product Introduction

51.2V series lithium iron phosphate battery system has been designed to provide power backup for remote or outside telecom plants like Access Terminals, Base Transceiver Stations, and Base Station Controllers. This system has the characteristics of high system integration, well reliability, long service life, and wide operating temperature range.

### 2.1 Front Panel Function Introduction

In order to operate the product correctly, please carefully view the function of the front panel of the battery.

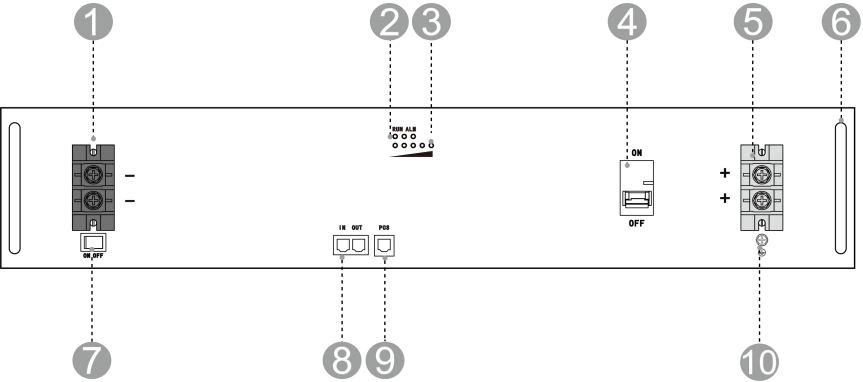


Figure 2-1: Front Panel Function Introduction

|   |   |
|---|---|
| ① | Negative output terminal.   |
| ② | RUN light: green LED lighting to show the battery running status.<br>Alarm light: yellow and red LED lighting to show the battery has been alarmed or protected.  |
| ③ | SOC: used to display the state of charge by 5 LEDs. The lightning of these LEDs indicates the SOC of 20%, 40%, 60%,80% and 100%.  |
| ④ | Miniature circuit breaker: to control total positive circuit off and on.  |
| ⑤ | Positive output terminal.   |
| ⑥ | Handle: used to carry/move the battery.   |
| ⑦ | Power button: to turn on/off the whole battery BMS standby, no power output.  |
| ⑧ | IN: parallel communication terminal (RJ45 port), to connect "out" terminal of previous battery, for communication between multiple parallel batteries.<br>OUT: parallel Communication Terminal (RJ45 port) , to connect "in" terminal of next battery, for communication between multiple parallel batteries. |
| ⑨ | PCS: Inverter communication terminal (RJ45 port)<br>follow the CAN protocol (baud rate: 500kbps), and RS-485(baud rate: 9600bps), used to output battery information to the inverter.   |
| ⑩ | Ground  |

2.2 Product Specifications

Table 2-1: Product Specifications

|                                    |      |  |
|------------------------------------|------|--|
| Main Parameter                     |      | SE-G10.2   |
| Battery Chemistry                  |      | LiFePO <sub>4</sub>  |
| Nominal Capacity (Ah) <sup>1</sup> |      | 200  |
| Nominal Voltage (V)                |      | 51.2   |
| Operating Voltage(V)               |      | 44.8~57.6  |
| Nominal Energy (kWh) <sup>1</sup>  |      | 10.24  |
| Cell Configuration                 |      | 2P16S  |
| Scalability <sup>2</sup>           |      | Max. 64 pcs pack (655kWh) in parallel  |
| Charge/Discharge                   | Max. | 100  |
| Current (A) <sup>3</sup>           | Peak | 200A(10 sec)   |
| Other Parameter                    |      |  |
| Recommend Depth of Discharge       |      | 90% DoD  |
| Dimension (W/H/D, mm)              |      | 710×133×540  |
| Weight Approximate(kg)             |      | 85   |
| Master LED indicator               |      | 5LED(SOC:20%~100%)   |
|                                    |      | 3LED (working, alarming, protecting)   |
| IP Rating of enclosure             |      | IP20   |
| Working Temperature                |      | Charge:0℃~55℃  |
|                                    |      | Discharge:-20℃~55℃   |
| Storage Temperature                |      | 0℃~35℃   |
| Humidity                           |      | 95%  |
| Altitude                           |      | ≤2000m   |
| Cycle Life                         |      | ≥6000(25℃±2℃,0.5C/0.5C,90%DOD,70%EOL)  |
| Installation                       |      | Wall-Mounted, Floor-Mounted ( Stacked ) , Rack-Mounted<br>( cabinet depth ≥600mm ) |
| Communication Port                 |      | CAN2.0, RS485  |
| Certification                      |      | UN38.3,MSDS  |

[1] DC Usable Energy,Test conditions : 25℃ ± 2℃, at beginning of life, 0.5C charge & 0.5C discharge,100% DOD.

[2] Max. 32 pcs without external CAN-Box.

[3] The current is affected by temperature and SOC.

[4] Conditions apply, refer to Deye Warranty Letter.


### 2.3 State Indicator


| Condition               | RUN           | ALM                   | ERROR | SOC1                        | SOC2 | SOC3  | SOC4 | SOC5 |
|-------------------------|---------------|-----------------------|-------|-----------------------------|------|-------|------|------|
| Power Off               | Off           |                       |       |                             |      |       |      |      |
| Discharge or Idle       | Blink         | Blink if Alarm Exists | Off   | e.g., SOC67%:               |      |       |      |      |
|                         |               |                       |       | Off                         | On   | On    | On   | On   |
| Charge                  |               | Exists                | Off   | e.g., SOC47%:               |      |       |      |      |
|                         |               |                       |       | Off                         | Off  | Blink | On   | On   |
| Alarm                   |               | Blink                 | Off   | Same as 'Discharge or Idle' |      |       |      |      |
| System Error/Protection |               |                       | On    |                             |      |       |      |      |
| Upgrade                 | Blink quickly |                       |       |                             |      |       |      |      |
| Critical Error          | Blink slowly  |                       |       |                             |      |       |      |      |



3. Unpack the Battery

The battery and the related accessories are packed in the carton box. Use tools to open the packing box. After open the packing box, confirm the product components according to the parts list.




 

 
 **WARNING**

Violent unpacking is strictly prohibited. If the battery system is found to be broken, deformed or other abnormal conditions, the user shall immediately stop using the battery and contact us.

3.1 Parts List

Check the parts during unpacking.

Table 3-1: Parts Lists

| No. | Items           | Appearance  | Usage  | Qty.               | Remark |
|-----|-----------------|---|--|--------------------|--------|
| 1   | Battery         |    | Provide power  | 1                  |        |
| 2   | SE-G10.2-BCable |    | 270mm 4AWG battery negative line;<br>270mm 4AWG battery positive line;<br>250mm RJ45 communication cable ;<br>250mm 10AWG yellow-green ground cable.                 | 1                  |        |
| 3   | SE-G10.2-PCable |  | Pair of 4AWG and RJ45 communication cable connect with hybrid inverter. The cable length can be customized based on customer requirements. Default length is 1500mm. | 1                  |        |
| 4   | 3U-Lrfe-B       |  | Pair of rack fixed ears used for battery fixing with rack or cabinet, including 10 screws of M4, 4 sets of M6 screws and buckle nuts.                                | 2 ears<br>10 bolts |        |


 

 




 
 
|    |                               |   |  |      |  |
|----|-------------------------------|---|--|------|--|
| 5  | 3U-Bracket-B                  |  | Simple stacking bracket, with height of 180mm. 1 set includes 4 brackets and 8 screws of M4. The number of batteries stacked is 4 at most. | 4pcs |  |
| 6  | Battery Wall-Mounted Brackets |  | Pair of simple wall hanging support, including 4 sets of M6 expansion screws.  | 2    |  |
| 7  | M6*16 Cabinet Bolt            |  | Fix the battery on the rack or cabinet   | 4    |  |
| 8  | M6 Expansion                  |  | Fixed wall bracket   | 4    |  |
| 9  | User Manual                   | /   | /  | 1    |  |
| 10 | Positioning Cardboard         |  | /  | 1    |  |

Table 3-2: Recommended Tools and Instruments

| No. | Items                       | Usage                            | Appearance  |
|-----|-----------------------------|----------------------------------|---|
| 1   | Phillips Screwdriver or Bit | To fasten battery and assemblies |    |
| 2   | Box Cutter                  | Opening boxes                    |   |
| 3   | Insulated Torque Wrench     | Installing cables and busbars    |  |
| 4   | Insulated Sockets           | Installing cables and busbars    |  |
| 5   | Battery Tester              | Measure battery module voltage   |  |


### 3.2 Visual Inspection of the Modules


After transporting the modules to the installation location, check for:


- Physical damage to the exterior
- Damaged or protruding screws


## 4. Battery Installation


This system must be installed by qualified, trained workers familiar with the required instruments.

|   |  |
|---|--|
|  | <b>⚠ WARNING</b>   |
|   | <p>Be sure to use insulated tools (torque wrench, extension, socket, etc.).</p> <p>All the instruments must be insulated and no metal articles (e.g., watch, ring) should be present in the installation area.</p> <p>All power switches must be turned off in advance.</p> <p>Prepare a CO<sub>2</sub> fire extinguisher, a first aid kit, and an AED (automated external defibrillator) before installation.</p> |

|   |   |
|---|---|
|  | <b>⚠ WARNING</b>  |
|   | <p>Arc Flash and Shock Hazard</p> <p>Insulated tools are required for any work on this energized equipment.</p> |

|  |  |
|--|--|
|  | <b>⚠ WARNING</b>   |
|  | <p>Sharp Edges</p> <p>Wear gloves and other protective gear to prevent injury.</p> |


|   |  |
|---|--|
|  | <b>⚠ WARNING</b>   |
|   | <p>Pinch Point</p> <p>Use caution when working in the enclosure to prevent injury.</p> |

|   |   |
|---|---|
|  | <b>⚠ CAUTION</b>  |
|   | <p>Heavy Object</p> <p>Can cause muscle strain or back injury.</p> <p>Use lifting aids and proper lifting techniques when moving trays, batteries, and other heavy objects.</p> |

## 4.1 Battery Module Installation

1. Transport battery modules to the installation location.
2. Place the battery modules on the bracket or rack or cabinet.
3. Fix the battery on the bracket or rack. Use the bracket or cabinet bolt to fix the battery into the bracket or rack.
4. After installation, tighten all bolts.

**Installation method 1:** with simple bracket installation

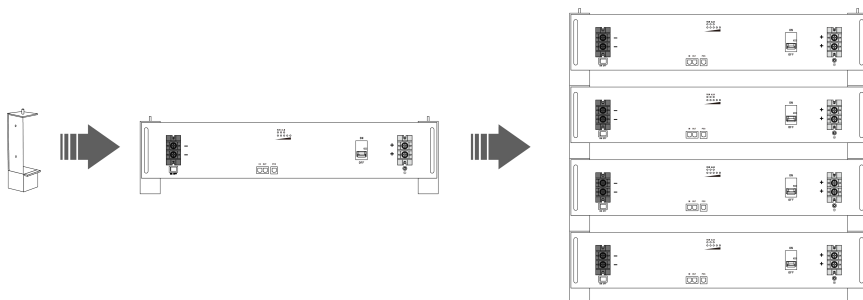

**Installation method 2:** wall-mounted method

The installation location description should meet requirements listed in the Figure 4-1:

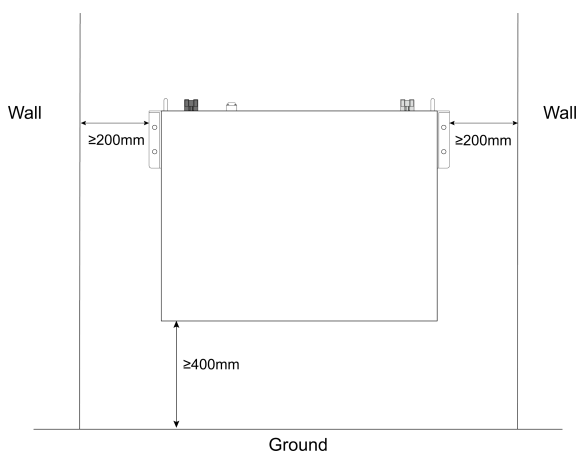


Figure 4-1

- a. Use the 10 screws of M4\*8 to fix two fixed ears to the battery, as show in Figure 4-2.



Figure 4-2

- b. Mark the location of the screw holes on the wall using positioning board, as shown in Figure 4-3.

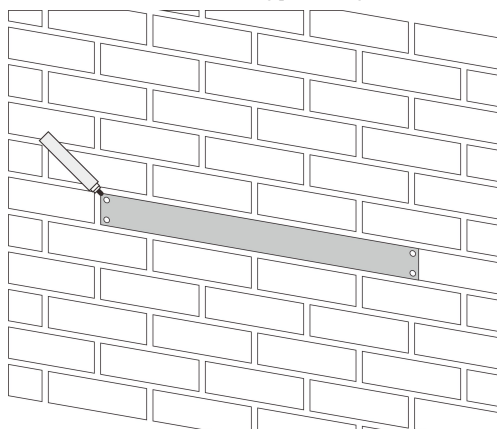


Figure 4-3

- c. Drill four holes with a diameter of 10mm and depth of 100-110mm into the wall using a drill. Fix the support to the wall with expansion bolts as shown in Figure 4-4.

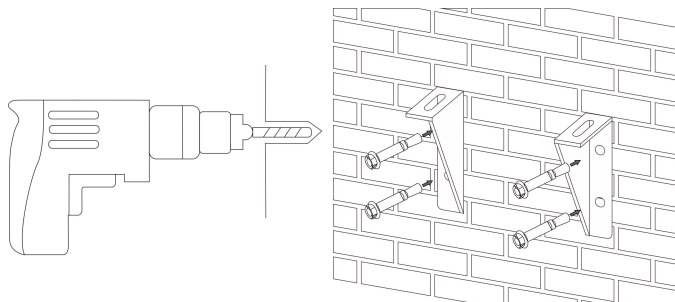


Figure 4-4

- d. Carry the battery and secure the battery to the support using 4 sets of M6 screws and buckle nuts as shown in Figure 4-5.



 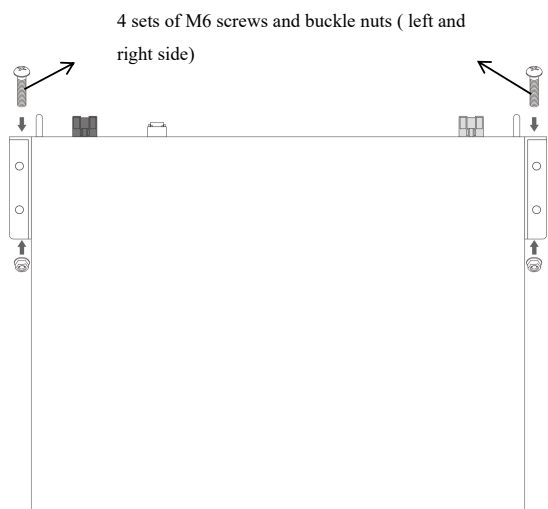






Figure 4-5

**Note the allowable installation modes.**

 

## 5. Cable Connection

### 5.1 Single Battery Connection

|   |   |
|---|---|
|    | <div data-bbox="288 220 479 260"><b>NOTICE</b></div> <p>Before connect the cable with the inverter, the worker must confirm the output switch of the inverter has been turn off, to prevent the risk of fire or electric shock.</p>   |
|    | <div data-bbox="288 413 479 437"><b>CAUTION</b></div> <p>Before connection, make sure to close the battery.</p> <p>Please follow the instructions to protect the module BMS against damage.</p> <p>DO NOT deviate from the sequence of steps below.</p> <p>Exercise extreme caution prevent the terminals from contacting anything except their intended mounting points.</p> <p>Terminals and their connected wires have either positive or negative polarity (Positive: +; Negative: -). The polarity of a terminal or a wire connected to the terminal is on the front of each module. Exercise extreme caution to prevent the terminals and/or wires with opposite polarity from contacting with each other.</p> <p>The maximum voltage of the battery is no more than 60V, which is higher than the safe voltage of 36V. Therefore, we still recommend that the battery terminals or other exposed parts should not be directly touched during the installation.</p> |
|   | <div data-bbox="288 904 479 944"><b>NOTICE</b></div> <p>When tightening the screws, make sure they are at a straight angle from the battery module terminals to avoid damage to the nuts inside.</p> <p>Assemble the screws using a Phillips-head within the fastening torque of less than 8.0 N•m (81.5 kgf•cm).</p>   |
|  | <div data-bbox="288 1163 479 1203"><b>IMPORTANT</b></div> <p>The power terminals, such as “+,” “-,” of the module are covered with the protecting cover to guard against a short circuit (shown in Figure 5-1).</p> <p>You must remove the insulation cover prior to connecting and reattach the insulation cover immediately after connecting.</p>   |



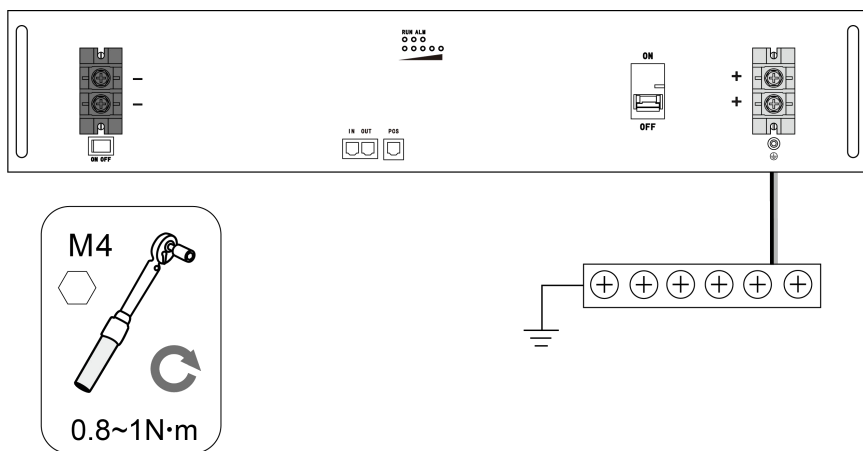


Figure 5-1: Install the Grounding Wire

Step 1 Wear the protective gloves.

Step 2 Install the battery ground cable.

Step 3 Install negative and positive power cables for the battery.

- 1) Remove the protective cover from the battery power wiring terminal.
- 2) Connect the negative power cable to the battery.
- 3) Connect the positive power cable to the battery.
- 4) Install the other end of the battery power cables at a battery route and the corresponding busbar in the power system.
- 5) Reinstall the protective cover on the battery power wiring terminals.

Connect the inverter:

- 1) Remove the protecting cover.
- 2) Take-down positive fixing bolt by the Phillips Screwdriver and connect the positive output cable between the battery positive terminal of the battery and the inverter. After connecting the battery, fastening bolt immediately to avoid dropping.

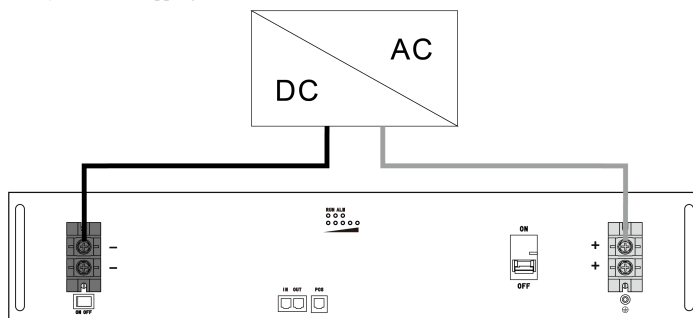


Figure 5-2: Single Battery Connection

- 3) Take-down negative fixing bolt by the Phillips Screwdriver and connect the negative output cable between the battery negative terminal of the battery and the inverter. After connecting the battery, fastening bolt immediately to avoid dropping.
- 4) Install the protecting cover.
- 5) Sort the cables and fasten the battery cables to the perforated bracket with cable ties.
- 6) Communication Line Connection

As shown in Figure 5-3, when monitoring the battery by the computer, connect the 'USB convert CAN Box' communication line between battery and computer.

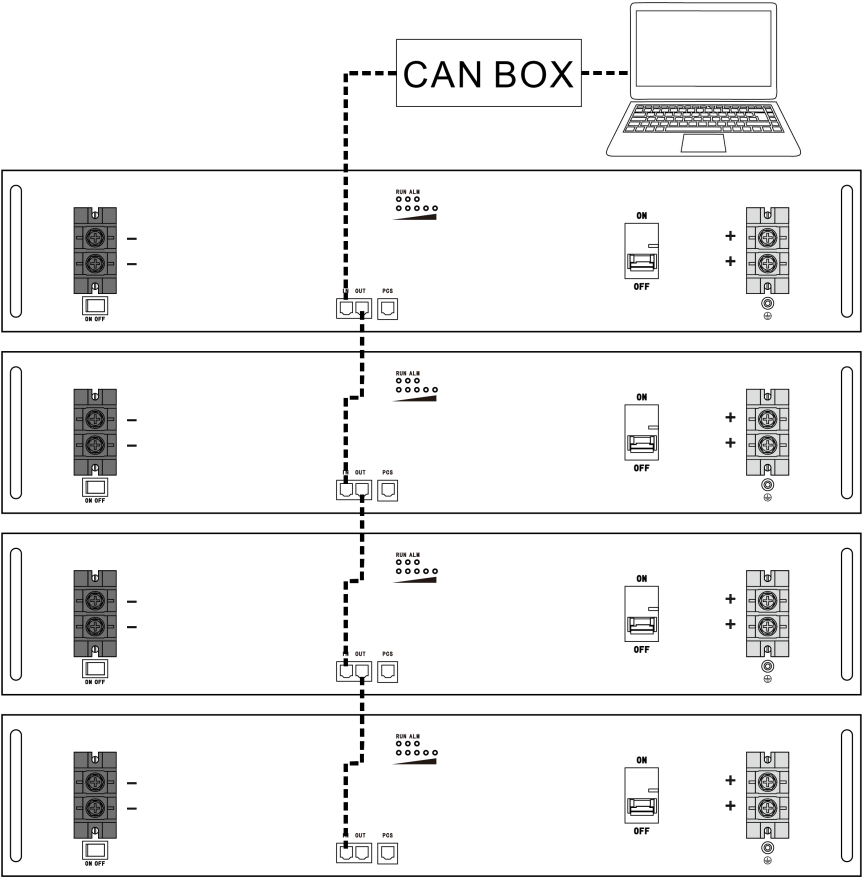


Figure 5-3: Communication Cable Connections between Battery and Computer


5.2 Connect Cables of the Multiple Batteries in Parallel

5.2.1. When multiple batteries in parallel, the cable connecting procedures are follows.

1. Parallel model1 (4 batteries suitable for scenarios where the inverter power $\leq$ 10kW)


For 4 batteries, it should be noted that the maximum current of the single battery is 100 A and maximum current in total is 200A (inverter power cannot exceed10kW). Exceeding 200A will cause heating of the connectors and cable.In severe cases, it will cause a fire.

Schematic diagram of parallel connection of low-power system batteries:

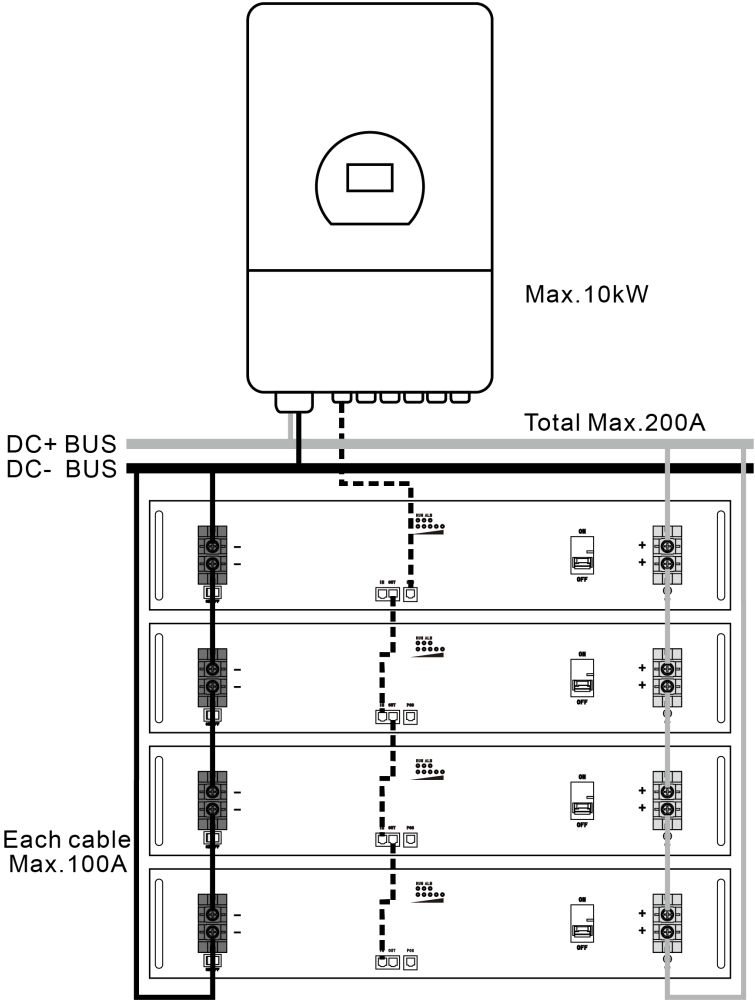


**2. Parallel mode2 (It is suitable for scenarios where the inverter power>12kW)**

Schematic diagram of parallel connection of high-power system batteries:

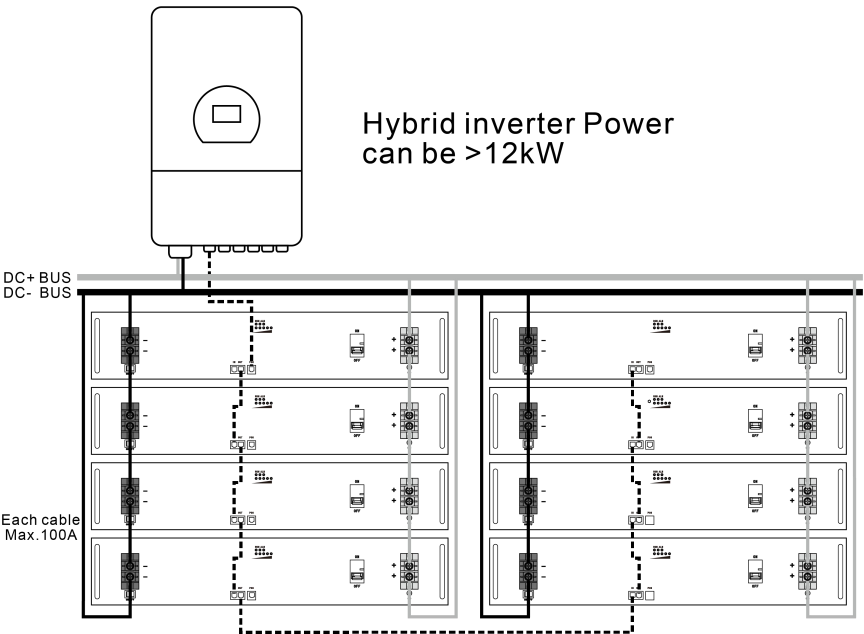

Or larger capacity systems:

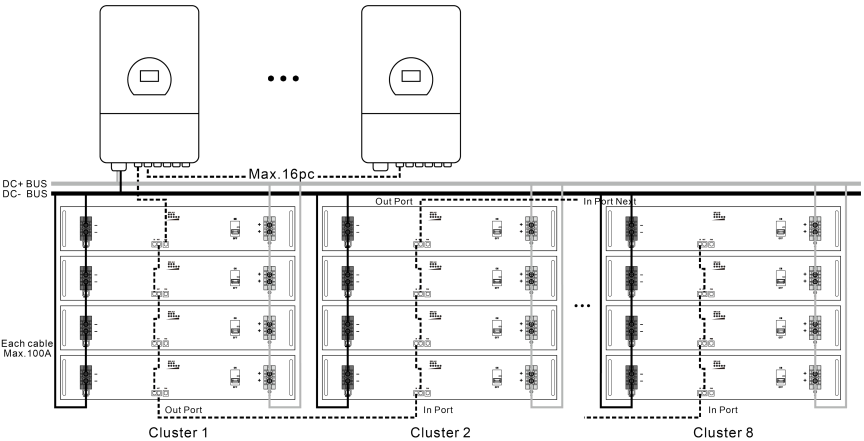

**5.2.2. As shown in 5.2.1, connect the communication line (a standard RJ45 network cable) between the adjacent batteries.**

Note: The PCS Port of the first battery must be connected to the inverter's battery communication interface, otherwise the inverter cannot communicate with the batteries.

Note: The OUT Port of the first battery is connected to the IN Port of the next battery, and so on, connecting the communication of multiple batteries together, otherwise multiple batteries will not be able to communicate correctly.

**5.2.3. Connect the communication line between battery and inverter**

**(1) PCS Port Definition**

Definition of PCS Port Pin

| No. | PCS Port Pin |
|-----|--------------|
| 1   | 485-B        |
| 2   | 485-A        |
| 3   | —            |
| 4   | CANH         |
| 5   | CANL         |
| 6   | —            |
| 7   | 485-A        |
| 8   | 485-B        |



**(2) IN Port Definition**

Definition of IN Port Pin

| No. | PCS Port Pin |
|-----|--------------|
| 1   | CANL         |
| 2   | CANH         |
| 3   | DI+          |
| 4   | DI-          |
| 5   | DI-          |
| 6   | DI+          |
| 7   | CANH         |
| 8   | CANL         |



**(3) OUT Port Definition**

Definition of Out Port Pin

| No. | Out Port Pin |
|-----|--------------|
| 1   | CANL         |
| 2   | CANH         |
| 3   | DO+          |
| 4   | DO-          |
| 5   | DO-          |
| 6   | DO+          |
| 7   | CANH         |
| 8   | CANL         |



### 5.3 Visual Inspection of the Connection

After connecting the battery, check for:

- Usage of positive and negative cables.
- Connection of the positive and negative terminals.
- All the bolts are tightened.
- Cables fixation and the appearance.
- The communication cable is connected correctly.
- The installation of the protecting cover.

## 6. Activate the Product

### 6.1 Start the Battery

- Hang the battery on the wall as shown on 4.1.
- Connect the wires according to the chapter 5.
- Close the air switch first, and then turn on the power button to prevent battery short-circuit protection failure caused by the pre-charge function.

#### Start the Battery:

After installation, wiring, and configuration are completed, you must check all the connection. When the connections are correctly, and then press power button to activate the battery. The green working light on of the battery flashes, indicating that the battery system is normal.

## **7. Inspection, Cleaning and Maintenance**

### **7.1 General Information**

- The battery product is not fully charged. It is recommended that the installation be completed within 3 months after arrival;
- During the maintenance process, do not re-install the battery in the battery product. Otherwise, the performance of the battery will be reduced;
- It is forbidden to dismantle any battery in the battery product, and it is forbidden to dissect the battery;
- After the battery product is over-discharged, it is recommended to charge the battery within 48 hours. The battery product can also be charged in parallel. After the battery product is connected in parallel, the charger only needs to connect the output port of any product battery.
- Never attempt to open or dismantle the battery! The inside of the battery does not contain serviceable parts.
- Disconnect the Li-Ion battery from all loads and charging devices before performing cleaning and maintenance activities
- Place the enclosed protective caps over the terminals before cleaning and maintenance activities to avoid the risk of contacting the terminals.

### **7.2 Inspection**

- Inspect for loose and/or damaged wiring and contacts, cracks, deformations, leakage, or damage of any other kind. If damage to the battery is found, it must be replaced. Do not attempt to charge or use a damaged battery. Do not touch the liquid from a ruptured battery.
- Regularly check the battery's state of charge. Lithium Iron Phosphate batteries will slowly self-discharge when not in use or whilst in storage.
- Consider replacing the battery with a new one if you note either of the following conditions:
  - The battery run time drops below 70% of the original run time.
  - The battery charge time increases significantly.

### **7.3 Cleaning**

If necessary, clean the Li-Ion battery with a soft, dry cloth. Never use liquids, solvents, or abrasives to clean the Li-Ion battery.

### **7.4 Maintenance**

The Li-Ion battery is maintenance free. Charge the battery to approximately > 80% of its capacity at least once every year to preserve the battery's capacity.

## 7.5 Storage

- The battery product should be stored in a dry, cool, and cool environment;
- Generally, the maximum storage period at room temperature is 6 months. When the battery is stored over 6 months, it is recommended to check the battery voltage. If the voltage is higher than 51.2V, it can continue to store the battery. In addition, it is needed to check the voltage at least once a month until the voltage is lower than 51.2V. When the voltage of the battery is lower than 51.2V, it must to be charged according to the charging strategy.
- The charging strategy is as follows: discharge the battery to the cutoff voltage with 0.2C10A current, and then charge with 0.2C10A current for about 3 hours. Keep the SOC of the battery at 40-70% when stored;
- When the battery product is stored, the source of ignition or high temperature should be avoided and it should be kept away from explosive and flammable areas.



## 8. Troubleshooting

To determine the status of the battery system, users must use additional battery status monitoring software to examine the protection mode. Refer to the installation manual about using the monitoring software. Once the user knows the protection mode, refer to the following sections for solutions.

Table 8-1: Troubleshooting

| Fault Type                           | Fault Generation condition  | Possible Causes  | Troubleshooting  |
|--------------------------------------|---|--|--|
| BMS fault                            | The cell voltage sampling circuit is faulty.<br>The cell temperature sampling circuit is faulty           | The welding point for cell voltage sampling is loose or disconnected.<br>The voltage sampling terminal is disconnected.<br>The fuse in the voltage sampling circuit is blown.<br>The cell temperature sensor has failed. | Replace the battery.   |
| Electrochemical cell fault           | The voltage of the cell is low or unbalanced.   | Due to large self- discharge, the cell over discharges to below 2.0V after long term storage.<br>The cell is damaged by external factors, and short circuits, pinpricks, or crushing occur.                              | Replace the battery.   |
| Overtoltage protection               | The cell voltage is greater than 3.65 V in charging state.<br>The battery voltage is greater than 58.4 V. | The busbar input voltage exceeds the normal value.<br>Cells are not consistent. The capacity of some cells deteriorates too fast or the internal resistance of some cells is too high.                                   | If the battery cannot be recovered due to protection against abnormality contact local engineers to rectify the fault. |
| Under voltage protection             | The battery voltage is less than 44.8V.<br>The minimum cell voltage is less than 2.8V                     | The mains power failure has lasted for a long time.<br>Cells are not consistent. The capacity of some cells deteriorates too fast or the internal resistance of some cells is too high.                                  | Same as above.   |
| Charge or discharge high temperature | The maximum cell temperature is greater than 60°C   | The battery ambient temperature is too high.<br>There are abnormal heat sources  | Same as above.   |

|                                      |   |   |                |
|--------------------------------------|---|---|----------------|
| protection                           |   | around                                      |                |
| Charge low temperature protection    | The minimum cell temperature is less than 0°C   | The battery ambient temperature is too low. | Same as above. |
| Discharge low temperature protection | The minimum cell temperature is less than -20°C | The battery ambient temperature is too low. | Same as above. |

By checking the above data and sending the data to the service personnel of our company, the service personnel of our company will reply the corresponding solution after receiving the data.

## 9. Battery recovery

Aluminum, copper, lithium, iron and other metal materials are recovered from discarded  $\text{LiFePO}_4$  batteries by advanced hydrometallurgical process, and the comprehensive recovery efficiency can reach 80%. The specific process steps are as follows:

### 9.1 Recovery process and steps of cathode materials

Aluminum foil as collector is amphoteric metal. Firstly, it is dissolved in  $\text{NaOH}$  alkali solution to make aluminum enter the solution in the form of  $\text{NaAlO}_2$ . After filtration, the filtrate is neutralized with sulfuric acid solution and precipitated to obtain  $\text{Al}(\text{OH})_3$ . When the pH value is above 9.0, most of the aluminum precipitates, and the obtained  $\text{Al}(\text{OH})_3$  can reach the level of chemical purity after analysis.

The filter residue is dissolved with sulfuric acid and hydrogen peroxide, so that lithium iron phosphate enters the solution in the form of  $\text{Fe}_2(\text{SO}_4)_3$  and  $\text{Li}_2\text{SO}_4$ , and is separated from carbon black and carbon coated on the surface of lithium iron phosphate. After filtration and separation, the pH value of the filtrate is adjusted with  $\text{NaOH}$  and ammonia water. First, iron is precipitated with  $\text{Fe}(\text{OH})_3$ , and the remaining solution is precipitated with saturated  $\text{Na}_2\text{CO}_3$  solution at  $90^\circ\text{C}$ .

Since  $\text{FePO}_4$  is slightly dissolved in nitric acid, the filter residue is dissolved with nitric acid and hydrogen peroxide, which directly precipitates  $\text{FePO}_4$ , separates impurities such as carbon black from acid solution, leaches  $\text{Fe}(\text{OH})_3$  from filter residue respectively, and precipitates  $\text{Li}_2\text{CO}_3$  with saturated  $\text{Na}_2\text{CO}_3$  solution at  $90^\circ\text{C}$ .

### 9.2 Recovery of anode materials

The recovery process of anode materials is relatively simple. After the separation of anode plates, the purity of copper can be more than 99%, which can be used for further refining electrolytic copper.

### 9.3 Recovery of diaphragm

The diaphragm material is mainly harmless, and has no recycling value.

### 9.4 List of recycling equipment:

Automatic dismantling machine, pulverizes, wet gold pool, etc.

## 10. Transportation Requirements

The battery products should be transported after packaging and during the transportation process, severe vibration, impact, or extrusion should be prevented to prevent sun and rain. It can be transported using vehicles such as cars, trains, and ships.

Always check all applicable local, national, and international regulations before transporting a Lithium Iron Phosphate battery.

Transporting an end-of-life, damaged, or recalled battery may, in certain cases, be specially limited or prohibited.

The transport of the Li-Ion battery falls under hazard class UN3480, class 9. For transport over water, air and land, the battery falls within packaging group PI965 Section I.

Use Class 9 Miscellaneous Dangerous Goods and UN Identification labels for transportation of lithium-ion batteries which are assigned Class 9. Refer to relevant transportation documents. Lithium batteries and lithium-ion cells are regulated in the U.S. in accordance with Part 49 of the Code of Federal Regulations, (49 CFR Sections 105-180) of the U.S. Hazardous Materials Regulations.



Class 9 Miscellaneous Dangerous Goods and UN Identification Label



241120020

www.deyeess.com

# EU Declaration of Conformity

Product:Rechargeable Li-ion Battery System  
System model:SE-G10.2  
Name and address of the manufacturer: NINGBO DEYE ESS TECHNOLOGY CO., LTD.  
No.568, South Rixian Road, Binhai Economic Development Zone, Cixi, Ningbo, Zhejiang, P.R.China

This declaration of conformity is issued under the sole responsibility of the manufacturer. Also this product is under manufacturer’s warranty.  
This declaration of conformity is not valid any longer: if the product is modified, supplemented or changed in any other way, as well as in case the product is used or installed improperly.

The object of the declaration described above is in conformity with the relevant Union harmonization legislation: The Electromagnetic Compatibility (EMC) Directive 2014/30/EU.

References to the relevant harmonized standards used or references to the other technical specifications in relation to which conformity is declared:

|                       |   |
|-----------------------|---|
| <b>CB:</b>            |   |
| IEC 62619:2022        | ● |
| <b>EMC:</b>           |   |
| EN IEC 61000-6-1:2019 | ● |
| EN IEC 61000-6-3:2021 | ● |

Nom et Titre / Name and Title:

KunLei Yu  
Test Manager

Au nom de / On behalf of:  
Date / Date (yyyy-mm-dd):  
A / Place :

NINGBO DEYE ESS TECHNOLOGY CO., LTD.  
2024-11-20  
Ningbo, China

EU DoC—v1

NINGBO DEYE ESS TECHNOLOGY CO., LTD

No.568, South Rixian Road, Binhai Economic Development Zone, Cixi, Ningbo, Zhejiang, P.R.China